

AT Keyboard Scan Codes

www.dg1sfj.de

Key	Pressed	Released
Escape	76	F0 76
F1	05	F0 05
F2	06	F0 06
F3	04	F0 04
F4	0C	F0 0C
F5	03	F0 03
F6	0B	F0 0B
F7	83	F0 83
F8	0A	F0 0A
F9	01	F0 01
F10	09	F0 09
F11	78	F0 78
F12	07	F0 07
Rollen	7E	F0 7E
^	0E	F0 0E
1	16	F0 16
2	1E	F0 1E
3	26	F0 26
4	25	F0 25
5	2E	F0 2E
6	36	F0 36
7	3D	F0 3D
8	3E	F0 3E
9	46	F0 46
0	45	F0 45
ß	4E	F0 4E
'	55	F0 55
Backspace	66	F0 66
Tab	0D	F0 0D
Q	15	F0 15
W	1D	F0 1D
E	24	F0 24
R	2D	F0 2D
T	2C	F0 2C
Z	35	F0 35
U	3C	F0 3C
I	43	F0 43
O	44	F0 44
P	4D	F0 4D
Ü	54	F0 54
+	5B	F0 5B
Return	5A	F0 5A

Key	Pressed	Released
ShiftLock	58	F0 58
A	1C	F0 1C
S	1B	F0 1B
D	23	F0 23
F	2B	F0 2B
G	34	F0 34
H	33	F0 33
J	3B	F0 3B
K	42	F0 42
L	4B	F0 4B
Ö	4C	F0 4C
Ä	52	F0 52
#	5D	F0 5D
Shift Links	12	F0 12
<	61	F0 61
Y	1A	F0 1A
X	22	F0 22
C	21	F0 21
V	2A	F0 2A
B	32	F0 32
N	31	F0 31
M	3A	F0 3A
,	41	F0 41
.	49	F0 49
-	4A	F0 4A
Shift Rechts	59	F0 59
Strg Links	14	F0 14
Alt	11	F0 11
Leertaste	29	F0 29
NumLock	77	F0 77
Pad 7	6C	F0 66
Pad 8	75	F0 75
Pad 9	7D	F0 7D
Pad Plus	79	F0 79
Pad 4	6B	F0 6B
Pad 5	73	F0 73
Pad 6	74	F0 74
Pad 1	69	F0 69
Pad 2	72	F0 72
Pad 3	7A	F0 7A
Pad 0	70	F0 70
Pad Komma	71	F0 71

Key	Pressed	Released
AltGr	E0 11	E0 F0 11
Strg Rechts	E0 14	E0 F0 14
Cur. Hoch	E0 75	E0 F0 75
Cur. Links	E0 6B	E0 F0 6B
Cur. Runter	E0 72	E0 F0 72
Cur. Rechts	E0 74	E0 F0 74
Einfüg	E0 70	E0 F0 70
Pos1	E0 6C	E0 F0 6C
Bild Hoch	E0 7D	E0 F0 7D
Entf	E0 71	E0 F0 71
Ende	E0 69	E0 F0 69
Bild Runter	E0 7A	E0 F0 7A
Pad Geteilt	E0 4A	E0 F0 4A
Pad Mal	E0 7C	E0 F0 7C
Pad Minus	E0 7B	E0 F0 7B
Pad Enter	E0 5A	E0 F0 5A

Key	Pressed	Released
Print	E0 12 E0 7C	E0 F0 7C E0 F0 12
Pause	E1 14 77 E1 F0 14 F0 77	-
Rollen LED0/1	7E B4 FF FA D4 D3 F0 7E	-
Rollen LED1/0	7E B4 FF FA 00 D3 F0 7E	-
ShiftL. LED0/1	58 B4 FF FA 10 D3 F0 58	-
ShiftL. LED1/0	58 B4 FF FA 00 D3 F0 58	-
NumL. LED0/1	77 B4 FF FA 08 D3 F0 77	-
NumL. LED1/0	77 B4 FF FA 00 D3 F0 77	-

9600Baud / 8Datenbits / OddParity / 1Stopbi